

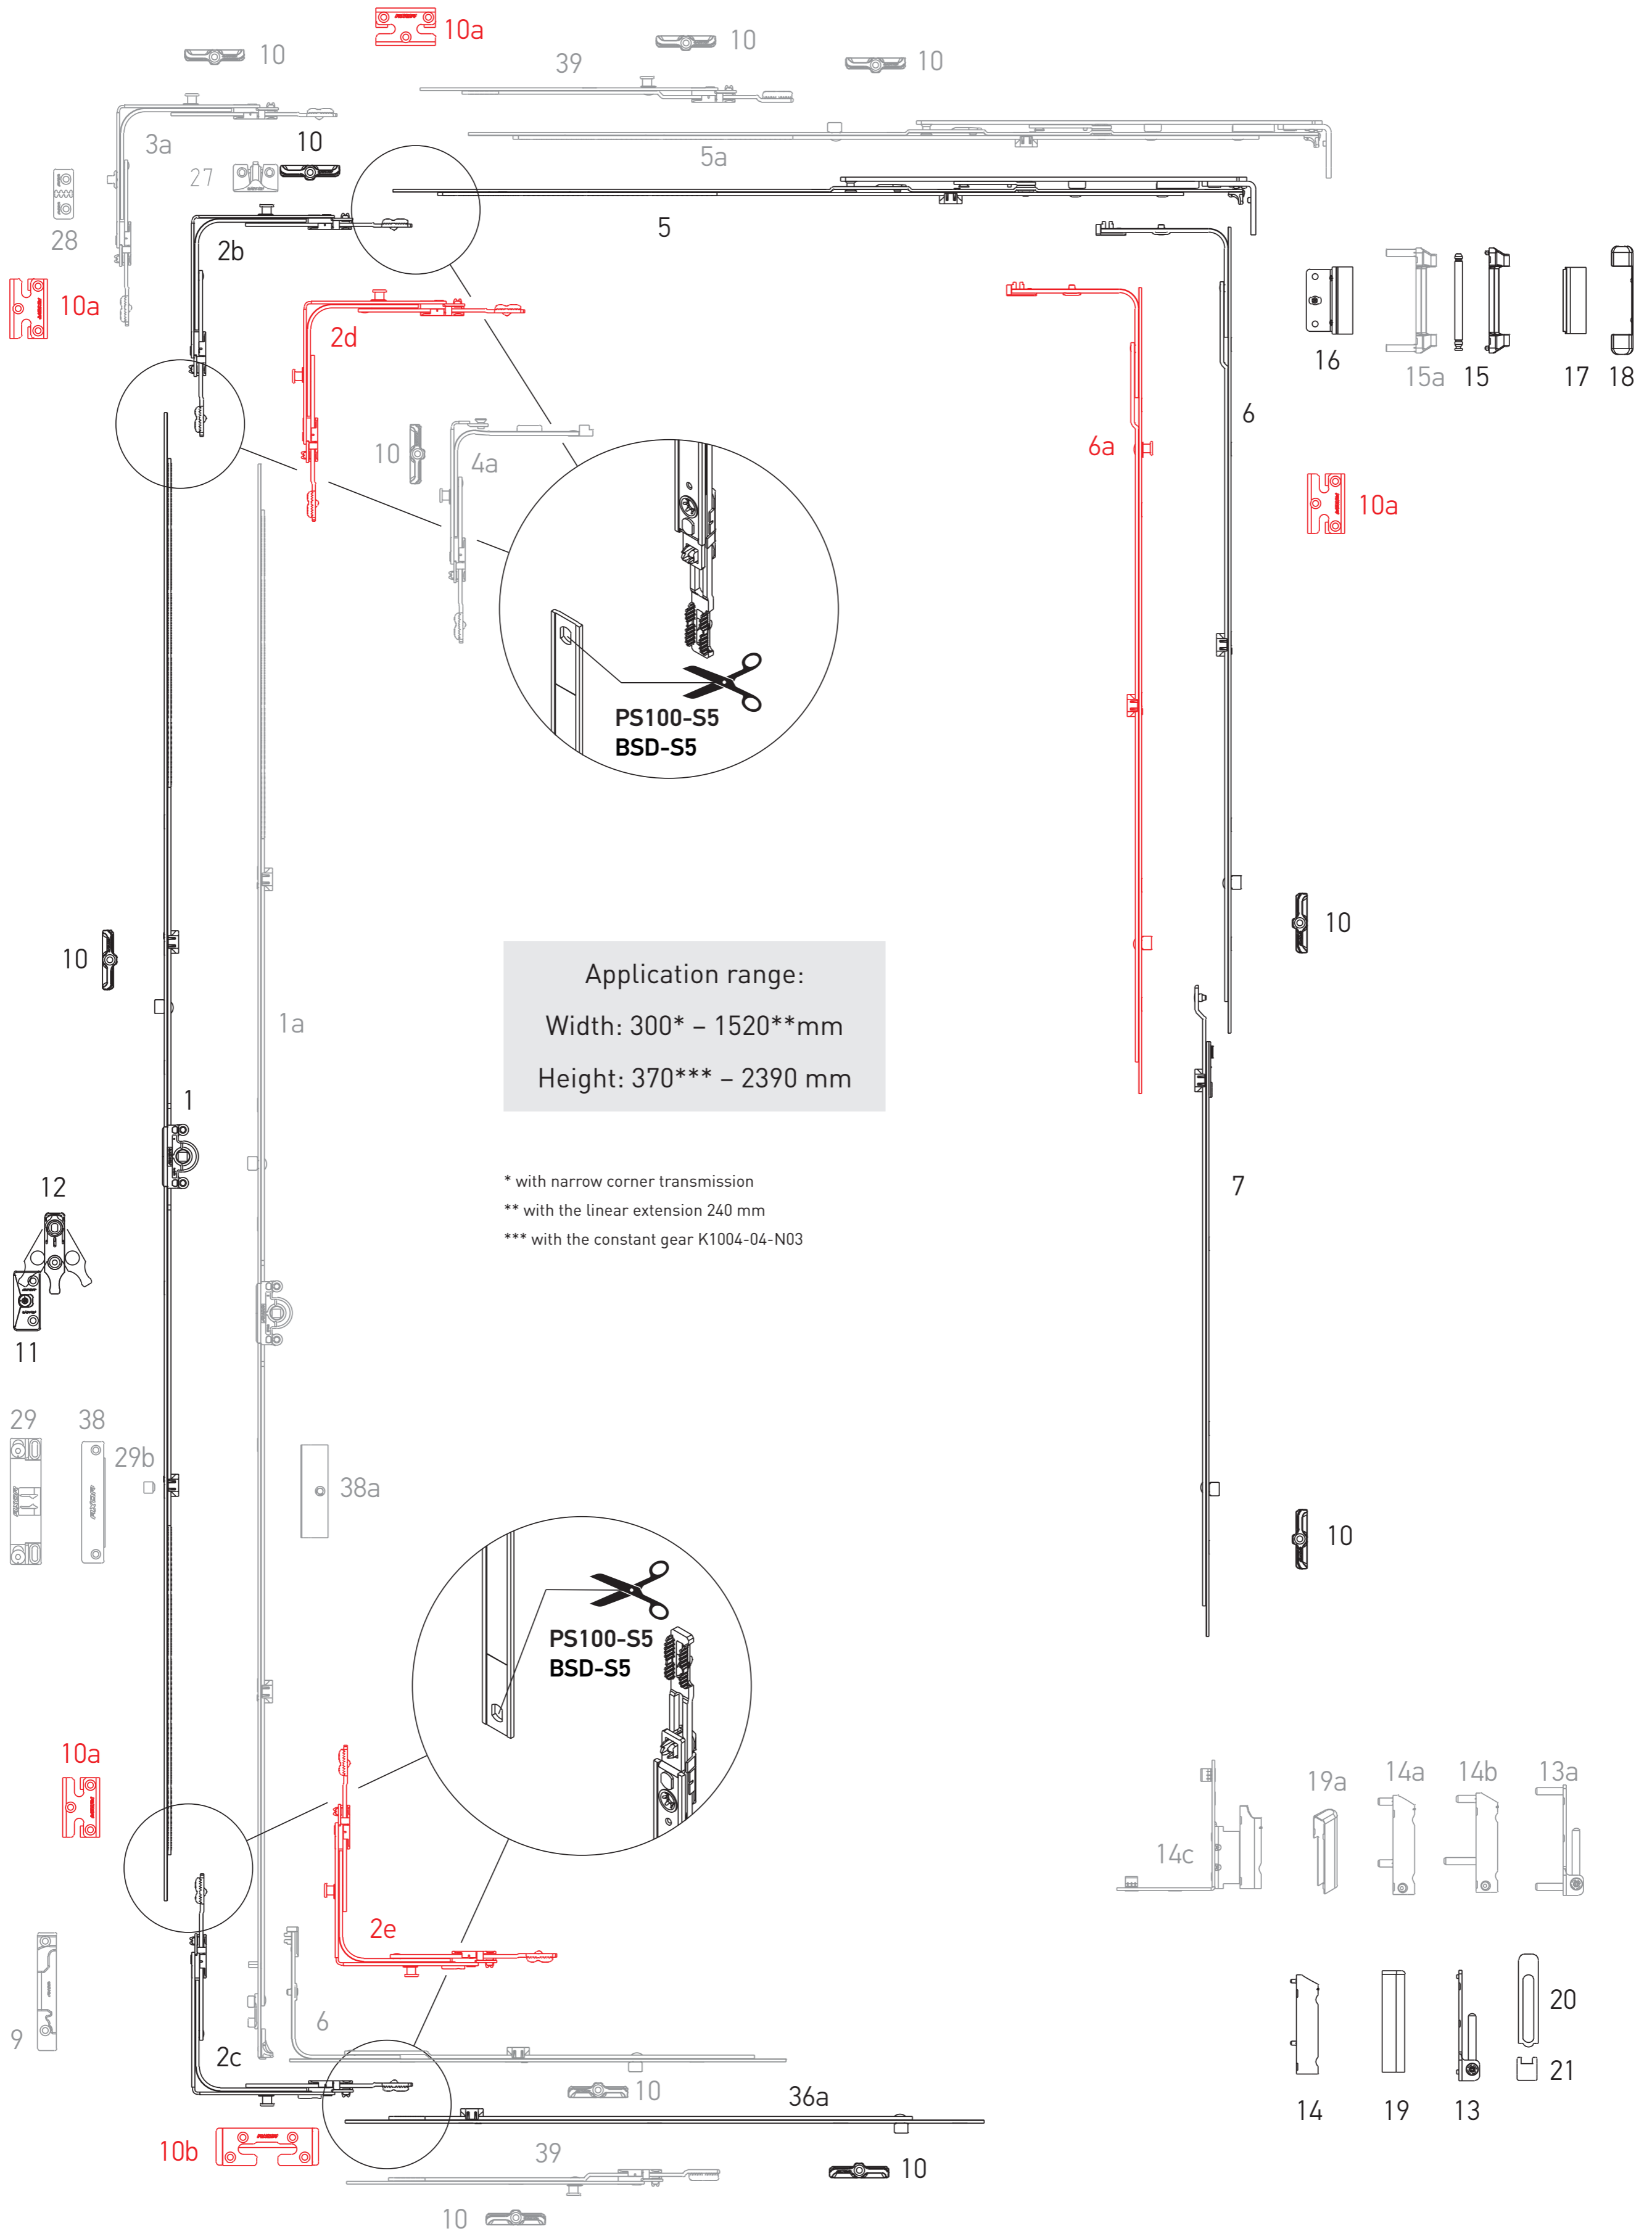
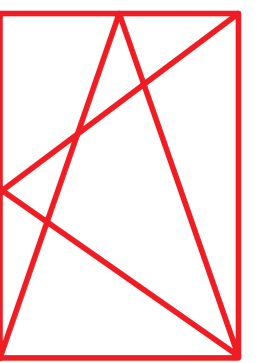
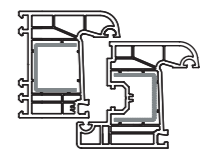


Nº	Description	Application range by width	Application range by height	Part No.
1	Gear variable 0, L=320, 450-550	—	450-550	K1001-02-N03
	Gear variable 1, L=520, 551-750	—	551-750	K1001-04-N03
	Gear variable 2, L=1000, 751-1230, 1 ML	—	751-1230	K1001-09-N03
	Gear variable 3, L=1200, 950-1430, 1 ML	—	950-1430	K1001-11-N03
	Gear variable 4, L=1480, 1231-1710, 2 ML	—	1231-1710	K1001-14-N03
	Gear variable 5, L=1680, 1431-1910, 2 ML	—	1431-1910	K1001-16-N03
	Gear variable 6, L=2160, 1911-2390, 3 ML	—	1911-2390	K1001-21-N03
1a	Constant gear 0, L=435, G=140, 370-550*	—	370-550	K1004-04-N03
	Constant gear 1, L=385, G=175, 400-500*	—	400-500	K1004-03-N03
	Constant gear 2, L=565, G=200, 480-680*	—	480-680	K1004-05-N03
	Constant gear 3, L=805, G=300, 681-920*, 1 ML	—	681-920	K1004-08-N03
	Constant gear 4, L=1045, G=450, 921-1160*, 1 ML	—	921-1160	K1004-10-N03
	Constant gear 5, L=1285, G=600, 1161-1400*, 1 ML	—	1161-1400	K1004-12-N03
	Constant gear 6, L=1525, G=600, 1401-1640*, 2 ML	—	1401-1640	K1004-15-N03
	Constant gear 7, L=1765, G=600, 1641-1880*, 2 ML	—	1641-1880	K1004-17-N03
	Constant gear 8, L=1765, G=1000, 1641-1880*, 2 ML	—	1641-1880	K1004-18-N03
	Constant gear 9, L=2005, G=1000, 1881-2120*, 2 ML	—	1881-2120	K1004-20-N03
Constant gear 10, L=2245, G=1000, 2121-2360*, 3 ML	—	2121-2360	K1004-22-N03	
2	Corner transmission, 1 ML, 150x150	400-1280	450-2390	K2001-00-N03
2a	Corner transmission, 1 MR, 150x150	400-1280	450-2390	K2005-00-N03
3	Corner transmission, integrated slit, 1 ML, 150x150, left	400-1280	450-2390	K2004-00-L03
	Corner transmission, integrated slit, 1 ML, 150x150, right	400-1280	450-2390	K2004-00-R03
4	Narrow corner transmission, 1 ML, 50x150	300-400	450-2390	K2003-00-N03
		400-600	370-550*	
5	Stay arm 1, L=485, 400-600	400-600	—	K3001-05-N03
	Stay arm 2, L=685, 601-800	601-800	—	K3001-07-N03
	Stay arm 3, L=925, 801-1040, 1 ML	801-1040	—	K3001-09-N03
	Stay arm 4, L=1165, 1041-1280, 1 ML	1041-1280	—	K3001-11-N03
5a	Stay arm 2, L=685, 601-800, 1 ML	601-800	—	K3001-57-N03
6	Middle lock L=400, 1 ML	600-1000	600-1000	K4001-04-N03
	Middle lock L=650, 1 ML	850-1250	850-1250	K4001-06-N03
	Middle lock L=720, 1 ML	920-1320	920-1320	K4001-07-N03
	Middle lock L=820, 2 ML	1251-1430	1251-1430	K4001-08-N03
	Middle lock L=1130, 2 ML	—	1251-1730	K4001-11-N03
6a	Middle lock L=400, 1 MR + 1 ML	600-1000	600-1000	K4008-04-N03
	Middle lock L=650, 1 MR + 1 ML	850-1250	850-1250	K4008-06-N03
	Middle lock L=820, 1 MR + 1 ML	1251-1430	1251-1430	K4008-08-N03
	Middle lock L=1130, 1 MR + 2 ML	—	1251-1730	K4008-11-N03
7	Middle lock extension, 1 ML, 480 mm	—	1710-2210	K4005-05-N03
	Middle lock extension, 1 ML, 680 mm	—	2211-2390	K4005-07-N03
8	Bottom extension	—	450-800	K4009-00-N03
		—	801-2390	K4002-00-N03
9	Tilt locking plate, left / right	—	—	***
10	Locking plate	—	—	***
10a	Locking plate safety	—	—	***
10b	Tilt locking plate safety	—	—	***
11	Lifting plate	—	751-2390	***
12	Wrong operation safety device with sash lifter	—	751-2390	A7001-00-N03
13	Corner bearing	—	—	A5002-00-N03
13a	Corner bearing 6x22	—	—	A5004-00-N03
14	Drill-in corner hinge 3x5	—	—	A5003-00-N03
14a	Drill-in corner hinge with gasket pressure adjustment 6x12	—	—	A5007-00-N03
14b	Drill-in corner hinge with gasket pressure adjustment 6x16/26	—	—	A5006-00-N03
14c	Rebate corner hinge 20/9, left / right	—	—	A5009-09-L/R03
	Rebate corner hinge 20/13, left / right	—	—	A5009-13-L/R03
15	Stay arm bearing 3x3	—	—	A5001-00-N03
15a	Stay arm bearing 6x24	—	—	A5005-00-N03
16	Top sash hinge	—	—	K5001-**-N03
17	Cover of top sash hinge	—	—	A7004-10-N****
18	Cover of stay arm bearing	—	—	A7005-10-N****
19	Cover of the drill-in corner hinge	—	—	A7006-10-N****
19a	Cover of rebate corner hinge, left / right	—	—	A7009-00-L/R****
20	Top cover of corner bearing	—	—	A7008-10-N****
21	Bottom cover of corner bearing	—	—	A7007-10-N****
26	Extension lock 240 mm, 1 ML	—	—	K4003-02-N03
	Extension lock 480 mm, 1 ML	—	—	K4003-05-N03
27	Locking plate, integrated slit	—	—	***
28	Locking plate for adjustable integrated slit	—	—	***
29	Balcony catch	—	—	A7184-13-N03
29b	Balcony locking pin	—	—	A7207-00-N03
36	Extension lock for corner transmission 480 mm, 1 ML	—	—	K4010-00-N03
	Extension lock for corner transmission 680 mm, 1 ML	—	—	K4010-07-N03
	Extension lock for corner transmission 880 mm, 2 ML	—	—	K4010-09-N03
	Extension lock for corner transmission 480 mm, 1 MR	—	—	K4030-00-N03
38	Magnetic balcony catch, frame part	—	—	A7053-00-N03
38a	Magnetic balcony catch, sash part	—	—	A7055-**-N03

* – displaced from the center
 ** – according to displacement axis of sash groove (9 mm, 10 mm, 13 mm, 14 mm)
 *** – look at the section "Profile-depending elements" in KOMFORT LINE K-3 technical catalog
 **** – for decorative covers in other colors look at p. 26 in KOMFORT LINE K-3 technical catalog

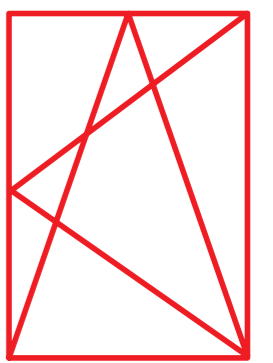

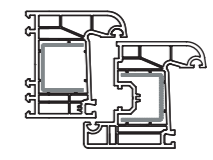

Nº	Description	Application range by width	Application range by height	Part No.
1	Gear variable 0, L=320, 450-550	—	450-550	K1001-02-N03
	Gear variable 1, L=520, 551-750	—	551-750	K1001-04-N03
	Gear variable 2, L=1000, 751-1230, 1 ML	—	751-1230	K1001-09-N03
	Gear variable 3, L=1200, 950-1430, 1 ML	—	950-1430	K1001-11-N03
	Gear variable 4, L=1480, 1231-1710, 2 ML	—	1231-1710	K1001-14-N03
	Gear variable 5, L=1680, 1431-1910, 2 ML	—	1431-1910	K1001-16-N03
	Gear variable 6, L=2160, 1911-2390, 3 ML	—	1911-2390	K1001-21-N03
1a	Constant gear 0, L=435, G=140, 370-550*	—	370-550	K1004-04-N03
	Constant gear 1, L=385, G=175, 400-500*	—	400-500	K1004-03-N03
	Constant gear 2, L=565, G=200, 480-680*	—	480-680	K1004-05-N03
	Constant gear 3, L=805, G=300, 681-920*, 1 ML	—	681-920	K1004-08-N03
	Constant gear 4, L=1045, G=450, 921-1160*, 1 ML	—	921-1160	K1004-10-N03
	Constant gear 5, L=1285, G=600, 1161-1400*, 1 ML	—	1161-1400	K1004-12-N03
	Constant gear 6, L=1525, G=600, 1401-1640*, 2 ML	—	1401-1640	K1004-15-N03
	Constant gear 7, L=1765, G=600, 1641-1880*, 2 ML	—	1641-1880	K1004-17-N03
	Constant gear 8, L=1765, G=1000, 1641-1880*, 2 ML	—	1641-1880	K1004-18-N03
	Constant gear 9, L=2005, G=1000, 1881-2120*, 2 ML	—	1881-2120	K1004-20-N03
Constant gear 10, L=2245, G=1000, 2121-2360*, 3 ML	—	2121-2360	K1004-22-N03	
2b	Corner transmission, 1 MR, 115x115	400-1280	450-2390	K2025-00-N03
2c	Corner transmission, 1 MR, 115x115, bottom	400-1280	450-2390	K2028-00-N03
2d	Corner transmission, 2 MR, 115x115	400-1280	450-2390	K2032-00-N03
2e	Corner transmission, 2 MR, 115x115, bottom	400-1280	450-2390	K2029-00-N03
3a	Corner transmission, integrated slit, 1 MR, 115x115, left/right	400-1280	450-2390	K2034-00-L/R03
4a	Narrow corner transmission, 1 MR, 15x115	300-400	450-2390	K2026-00-N03
		400-600	370-550*	
5	Stay arm 1, L=485, 400-600	400-600	—	K3001-05-N03
	Stay arm 2, L=685, 601-800	601-800	—	K3001-07-N03
	Stay arm 3, L=925, 801-1040, 1 ML	801-1040	—	K3001-09-N03
	Stay arm 4, L=1165, 1041-1280, 1 ML	1041-1280	—	K3001-11-N03
5a	Stay arm 2, L=685, 601-800, 1 ML	601-800	—	K3001-57-N03
6	Middle lock L=400, 1 ML	600-1000	600-1000	K4001-04-N03
	Middle lock L=650, 1 ML	850-1250	850-1250	K4001-06-N03
	Middle lock L=720, 1 ML	920-1320	920-1320	K4001-07-N03
	Middle lock L=820, 2 ML	1251-1430	1251-1430	K4001-08-N03
	Middle lock L=1130, 2 ML	—	1251-1730	K4001-11-N03
6a	Middle lock L=400, 1 MR + 1 ML	600-1000	600-1000	K4008-04-N03
	Middle lock L=650, 1 MR + 1 ML	850-1250	850-1250	K4008-06-N03
	Middle lock L=820, 1 MR + 1 ML	1251-1430	1251-1430	K4008-08-N03
	Middle lock L=1130, 1 MR + 2 ML	—	1251-1730	K4008-11-N03
7	Middle lock extension, 1 ML, 480 mm	—	1710-2210	K4005-05-N03
	Middle lock extension, 1 ML, 680 mm	—	2211-2390	K4005-07-N03
9	Tilt locking plate, right / left	—	—	***
10	Locking plate	—	—	***
10a	Locking plate safety	—	—	***
10b	Tilt locking plate safety	—	—	***
11	Lifting plate	—	751-2390	***
12	Wrong operation safety device with sash lifter	—	751-2390	A7001-00-N03
13	Corner bearing 3x3	—	—	A5002-00-N03
13a	Corner bearing 6x22	—	—	A5004-00-N03
14	Drill-in corner hinge 3x5	—	—	A5003-00-N03
14a	Drill-in corner hinge with gasket pressure adjustment 6x12	—	—	A5007-00-N03
14b	Drill-in corner hinge with gasket pressure adjustment 6x16/26	—	—	A5006-00-N03
14c	Rebate corner hinge 20/9, left / right	—	—	A5009-09-L/R03
	Rebate corner hinge 20/13, left / right	—	—	A5009-13-L/R03
15	Stay arm bearing 3x3	—	—	A5001-00-N03
15a	Stay arm bearing 6x24	—	—	A5005-00-N03
16	Top sash hinge	—	—	K5001-**-N03
17	Cover of top sash hinge	—	—	A7004-10-N****
18	Cover of stay arm bearing	—	—	A7005-10-N****
19	Cover of the drill-in corner hinge	—	—	A7006-10-N****
19a	Cover of rebate corner hinge, left / right	—	—	A7009-00-L/R****
20	Top cover of corner bearing	—	—	A7008-10-N****
21	Bottom cover of corner bearing	—	—	A7007-10-N****
27	Locking plate, integrated slit	—	—	***
28	Locking plate for adjustable integrated slit	—	—	***
29	Balcony catch	—	—	A7184-13-N03
29b	Balcony locking pin	—	—	A7207-00-N03
36a	Extension lock 480 mm, 1 ML	—	—	K4053-05-N03
	Extension lock 680 mm, 1 ML	—	—	K4053-07-N03
	Extension lock 880 mm, 2 ML	—	—	K4053-09-N03
38	Magnetic balcony catch, frame part	—	—	A7053-00-N03
38a	Magnetic balcony catch, sash part	—	—	A7055-**-N03
39	Extension lock for corner transmission, 240 mm, 1 MR	—	—	K4050-02-N03
	Extension lock for corner transmission, 480 mm, 1 MR	—	—	K4050-05-N03

* - displaced from the center

** - according to displacement axis of sash groove (9 mm, 10 mm, 13 mm, 14 mm)

*** - look at the section "Profile-depending elements" in KOMFORT LINE K-3 technical catalog

**** - for decorative covers in other colors look at p. 26 in KOMFORT LINE K-3 technical catalog